



Disassembling Breville BKC600XL Bottom Covers

Disassemble bottom covers to prepare for needed repairs and/or replacements.

Written By: Antonio



INTRODUCTION


This guide acts as a prerequisite for removing or replacing any part located inside the main body of the brewer.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Bottom Cover #1


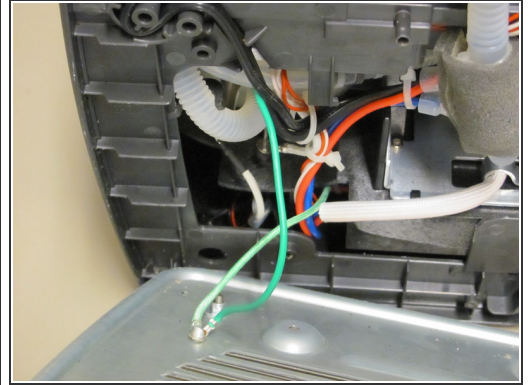


- Use a Phillips #0 screwdriver to remove the following ten screws:

- Four 18mm Phillips screws.
- Four 9.75mm Phillips screws.
- Two 8mm Phillips screws.



⚠ The cover will not remove entirely. Keep *green* ground wire attached to the cover.

Step 2 — Black Water Inlet

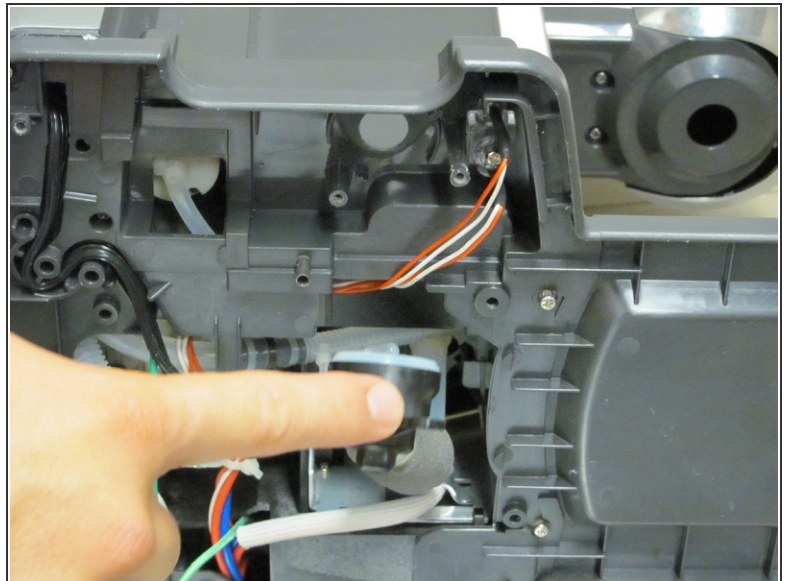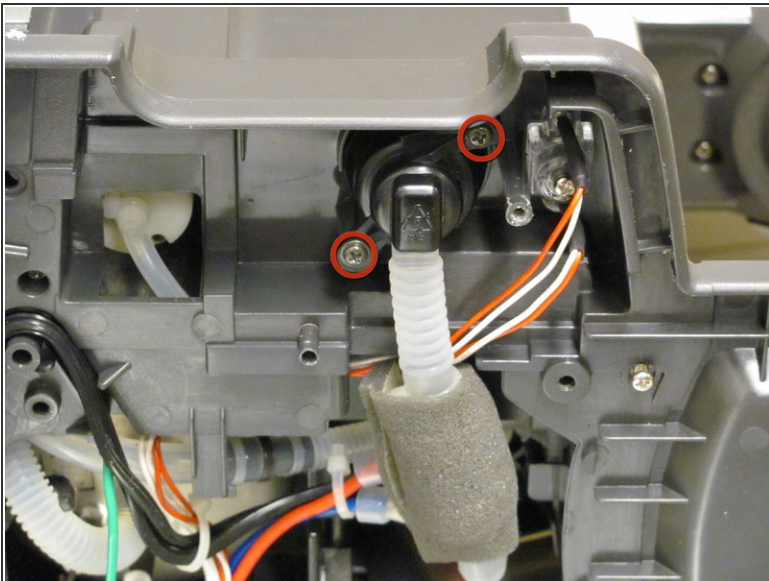



- Remove the two 14.5 Phillips screws.
- ⓘ Ensure that only the water inlet valve can be moved.

Step 3 — Bottom Cover #2

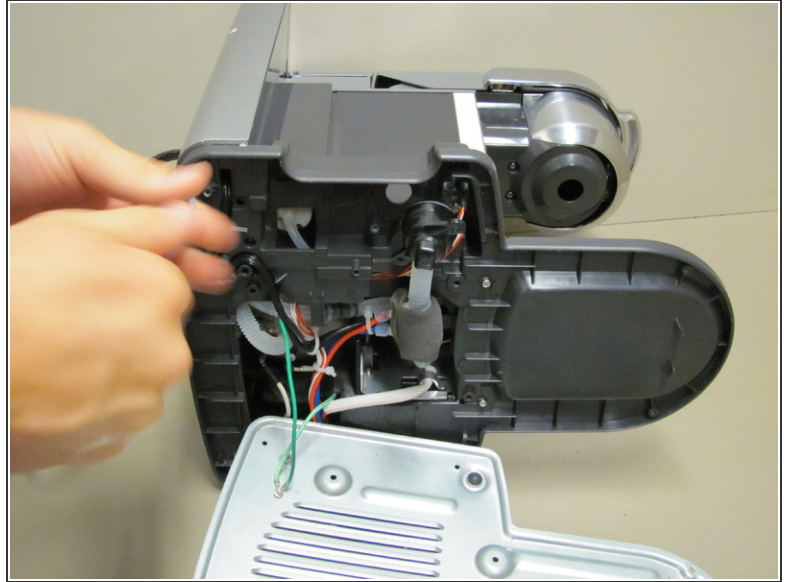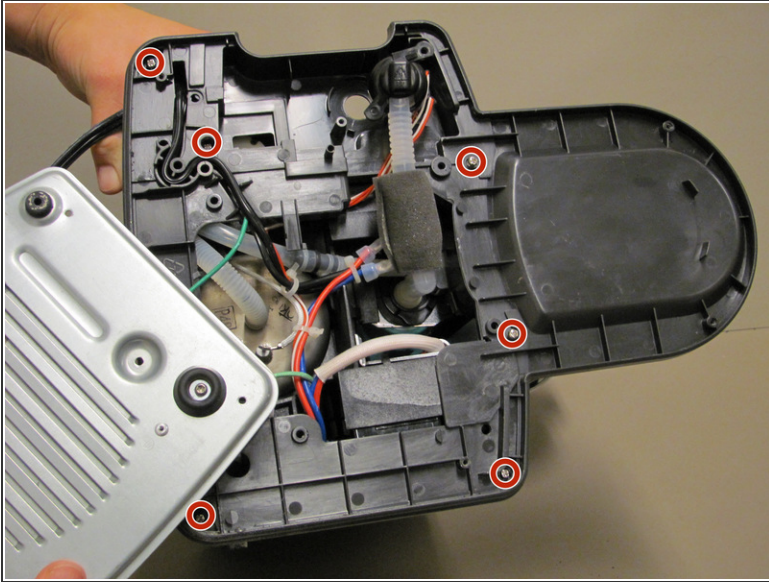

- Use a Phillips #0 screwdriver to remove the following six screws:
 - Six 14.5mm Phillips screws.

Step 4 — Power Cord

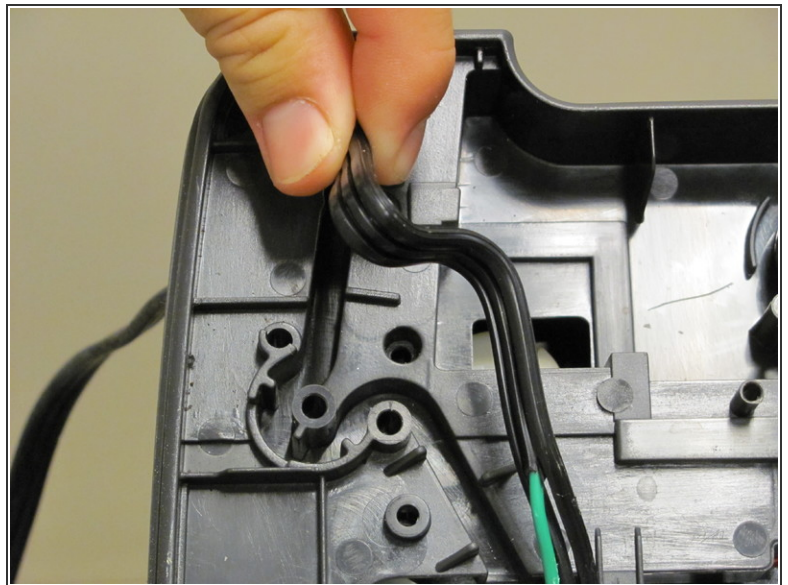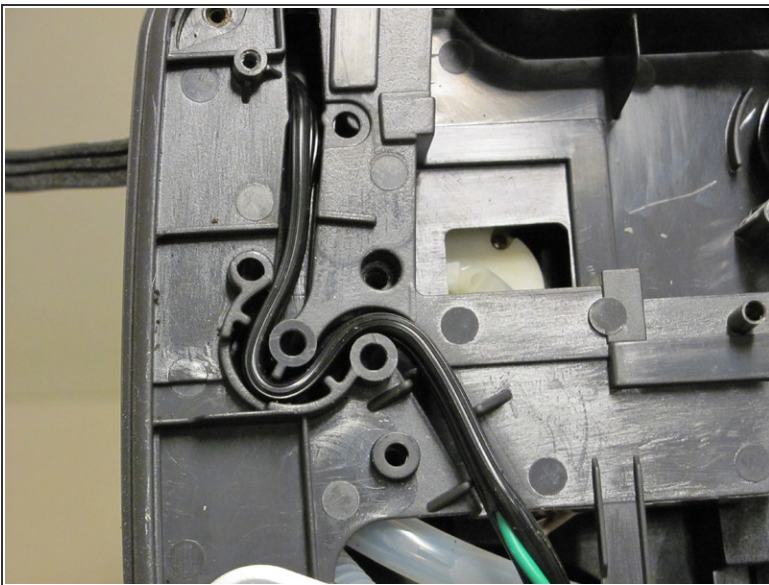

- Remove the power cord from the groove. (the black cord that leads into the green wire.)

 This creates more slack in the wire to give you more room to work with.

 DO NOT remove green wire from the cover its attached to.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 11:44:07 PM.